

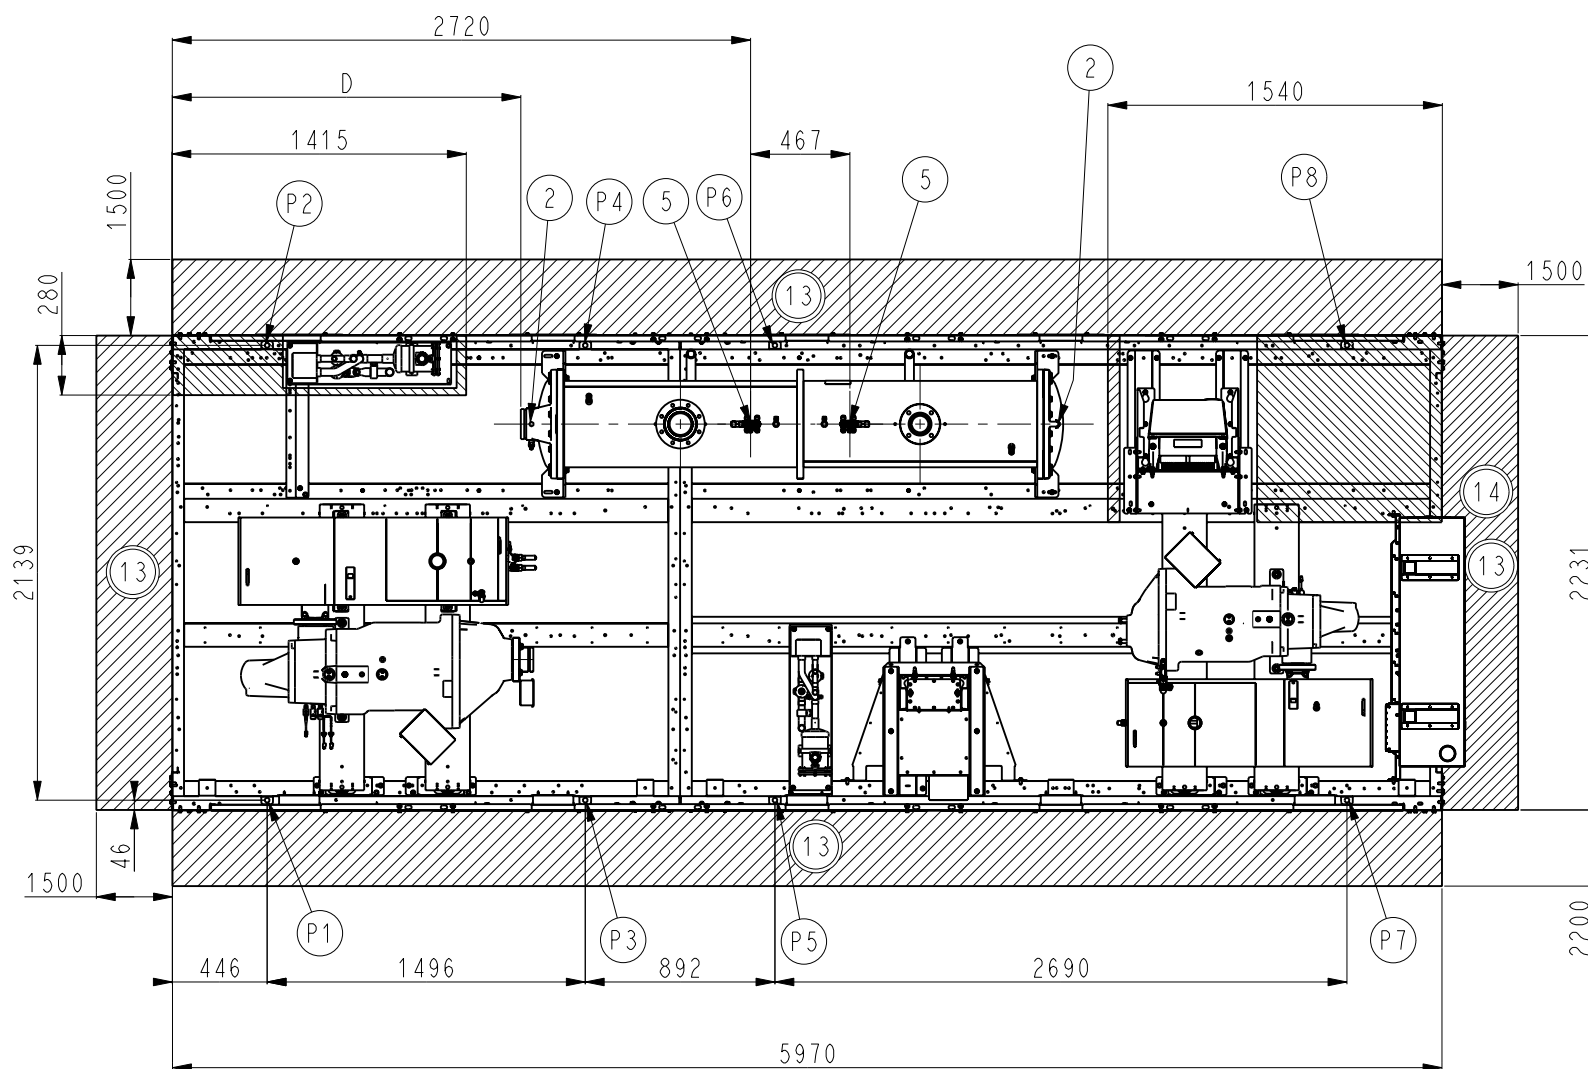
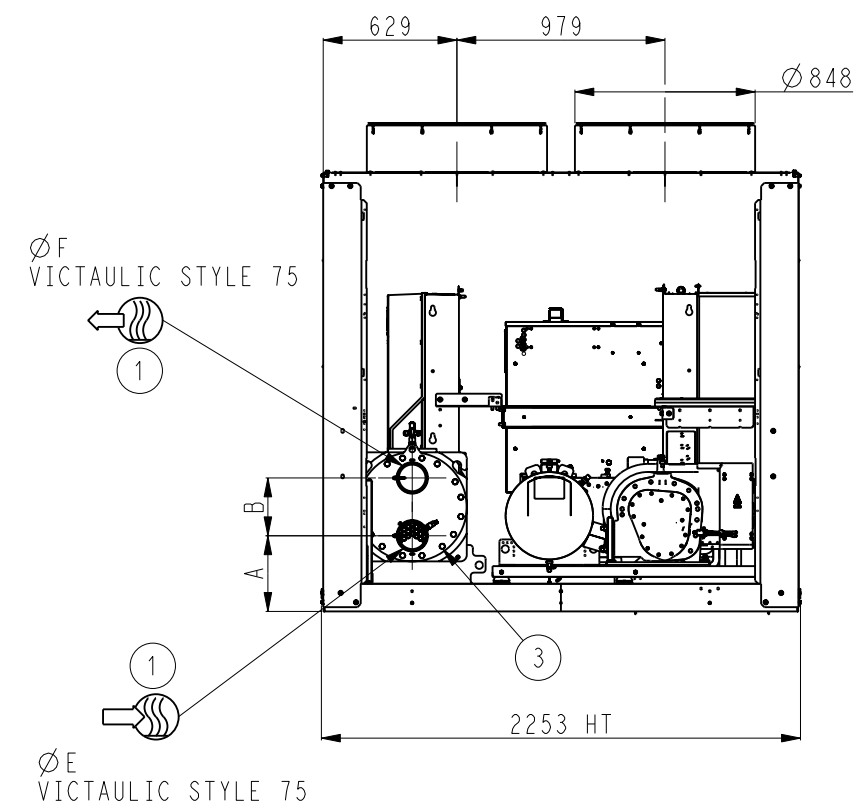
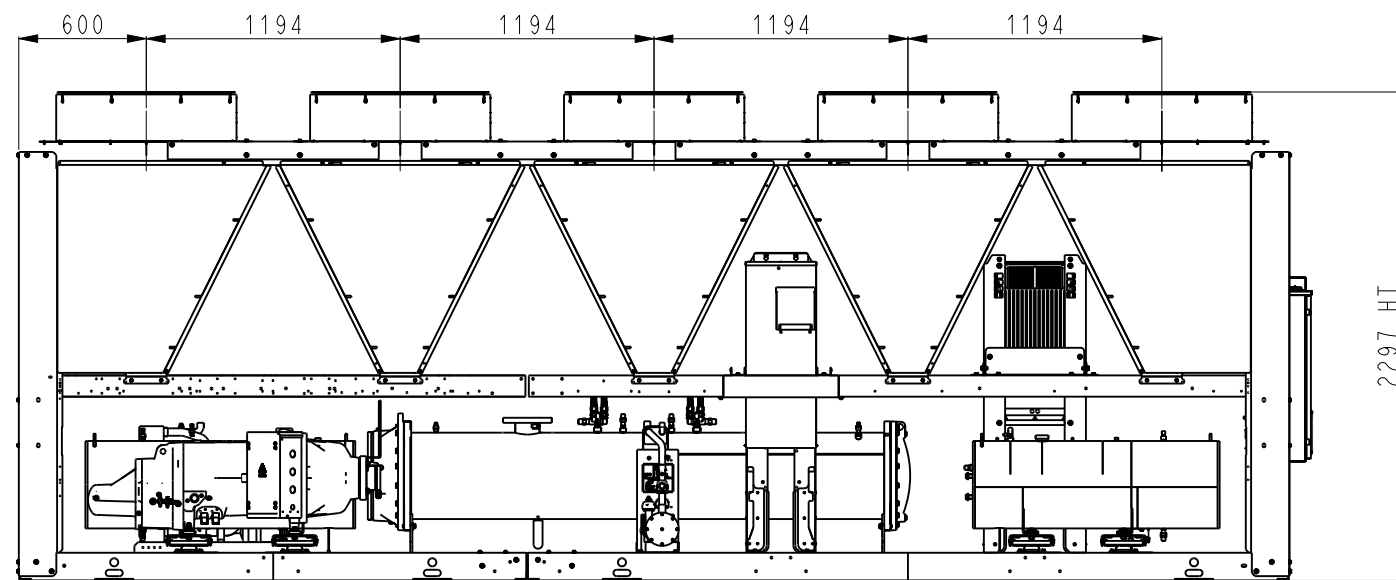



15 POWER ELECTRICAL BOX

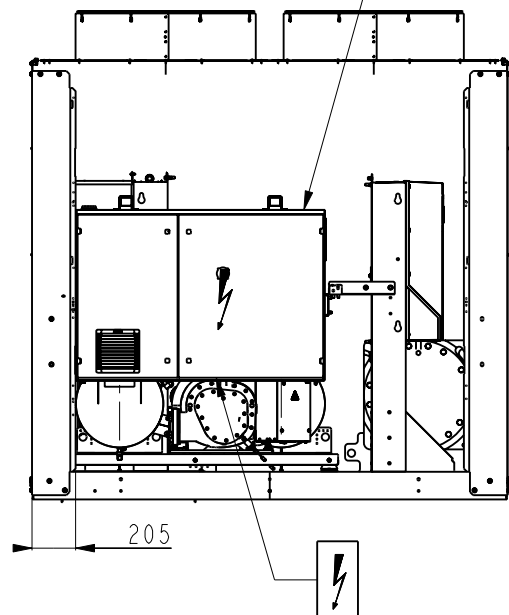


	XAV0500	XAV0600
A	356	371
B	272	242
C	419	419
D	1639	1639
ØE	141.3	168.3
ØF	141.3	168.3

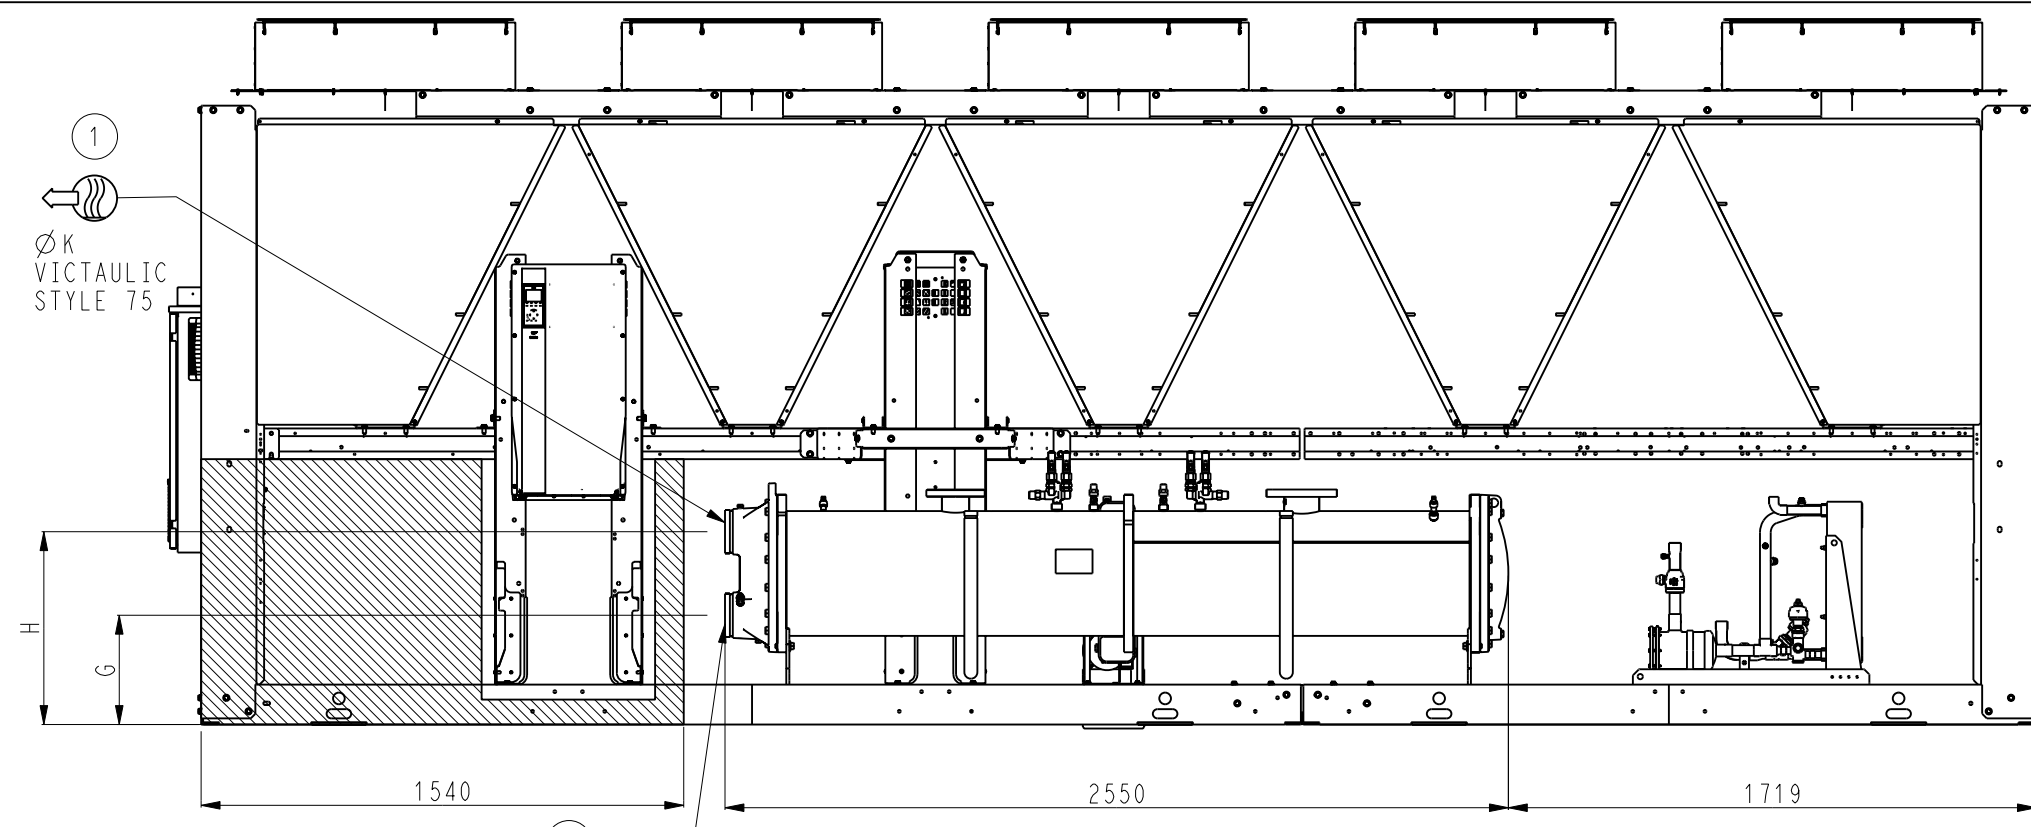


NO ACCESS FOR SERVICE  
DUE TO VFD POSITION

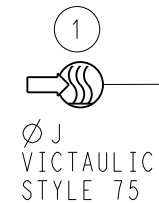


**OPTION 107**




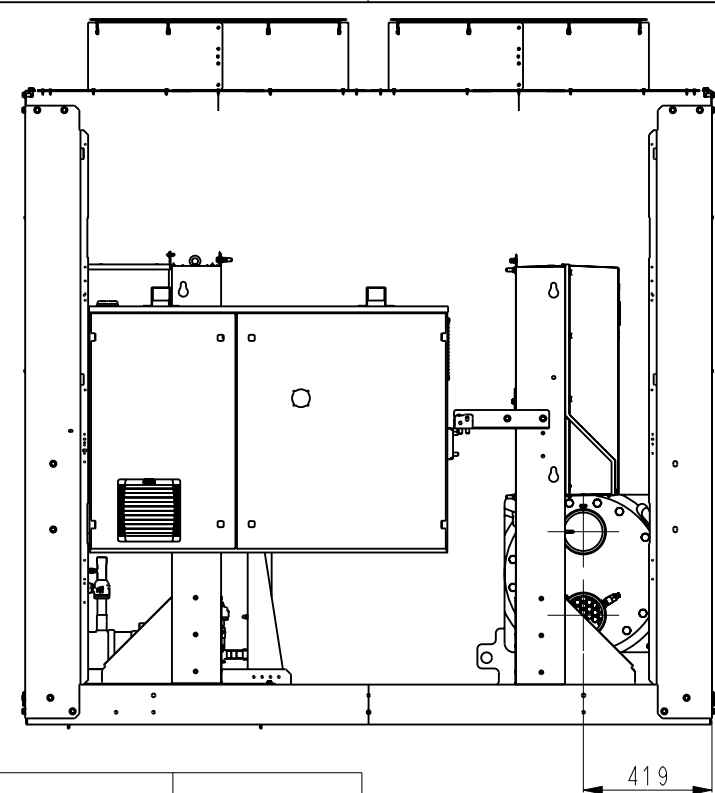


	XAV0500	XAV0600
G	356	371
H	628	613
ØJ	141.3	168.3
ØK	141.3	168.3

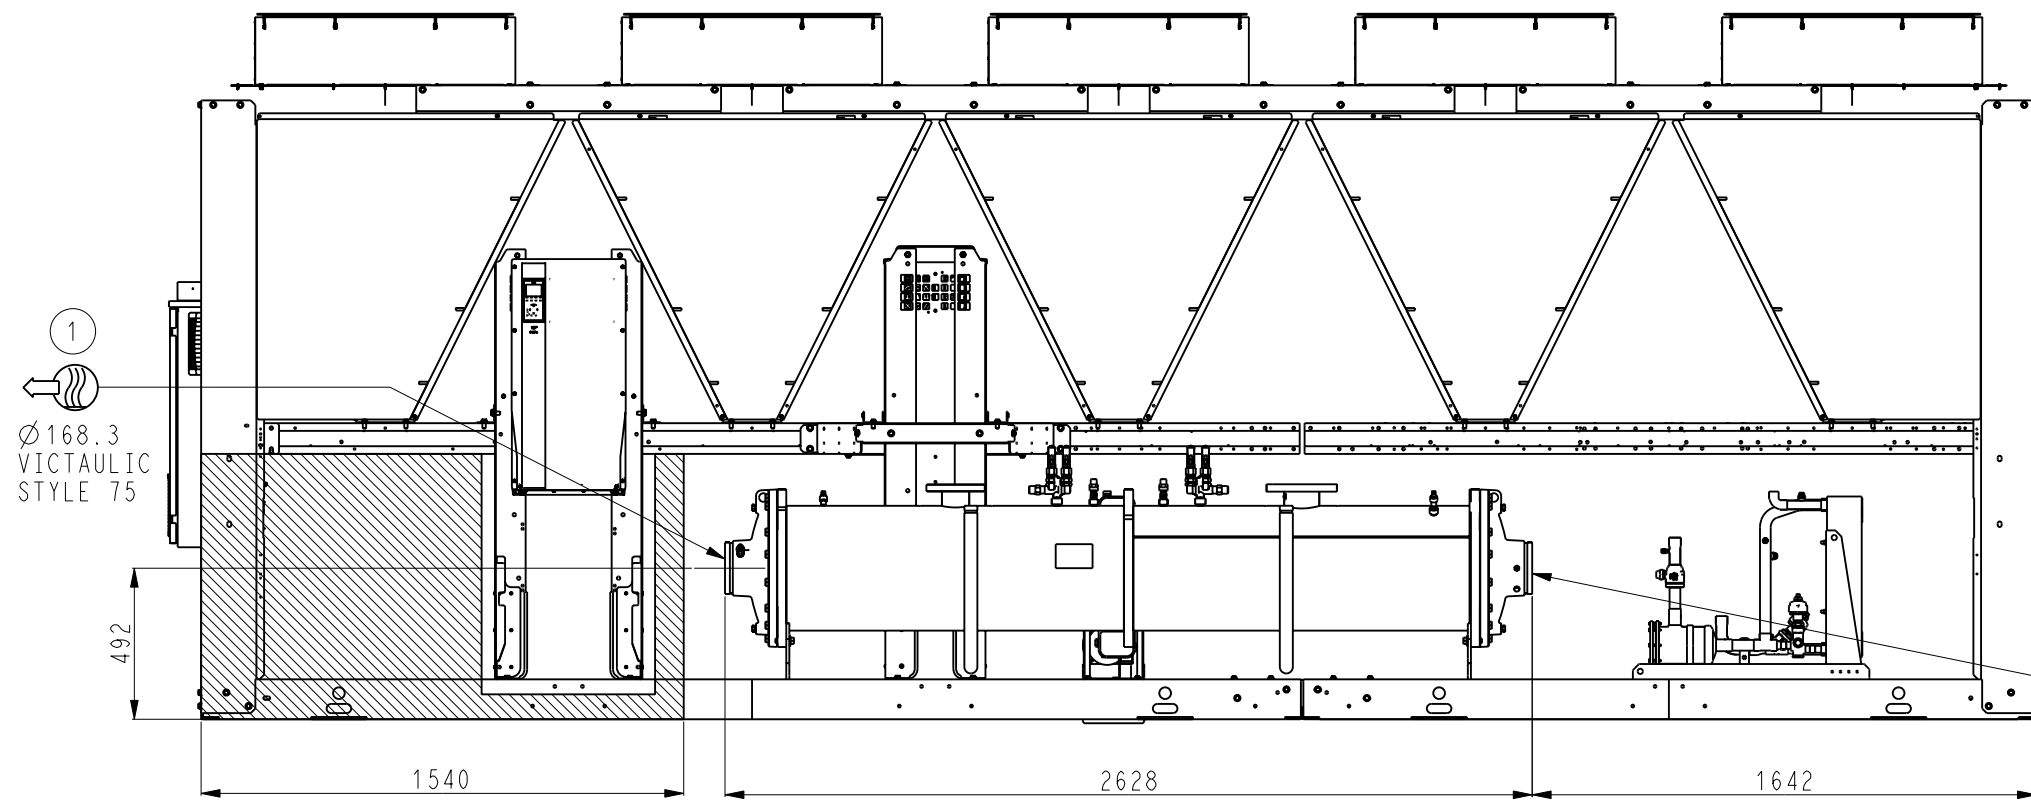

**OPTION 100C**

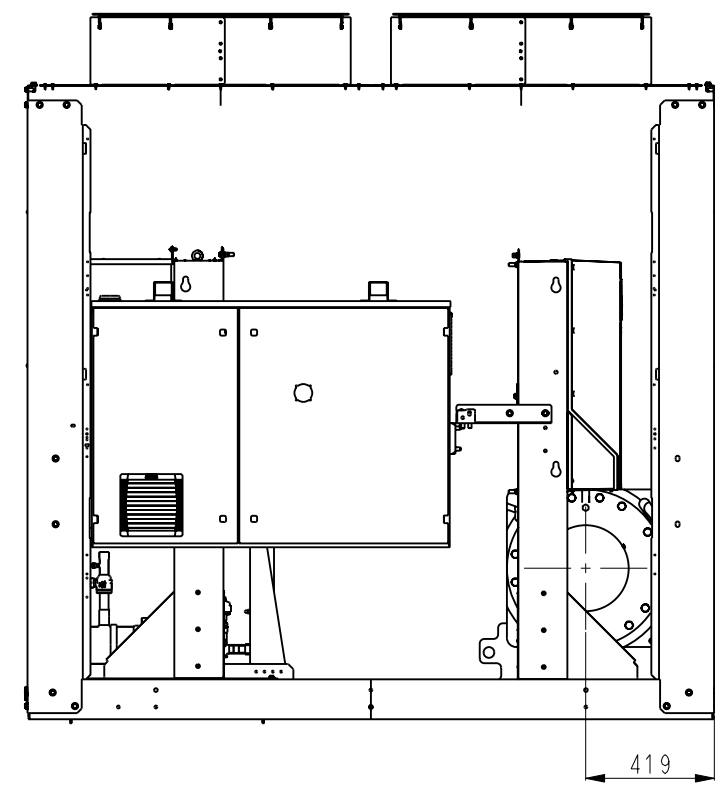

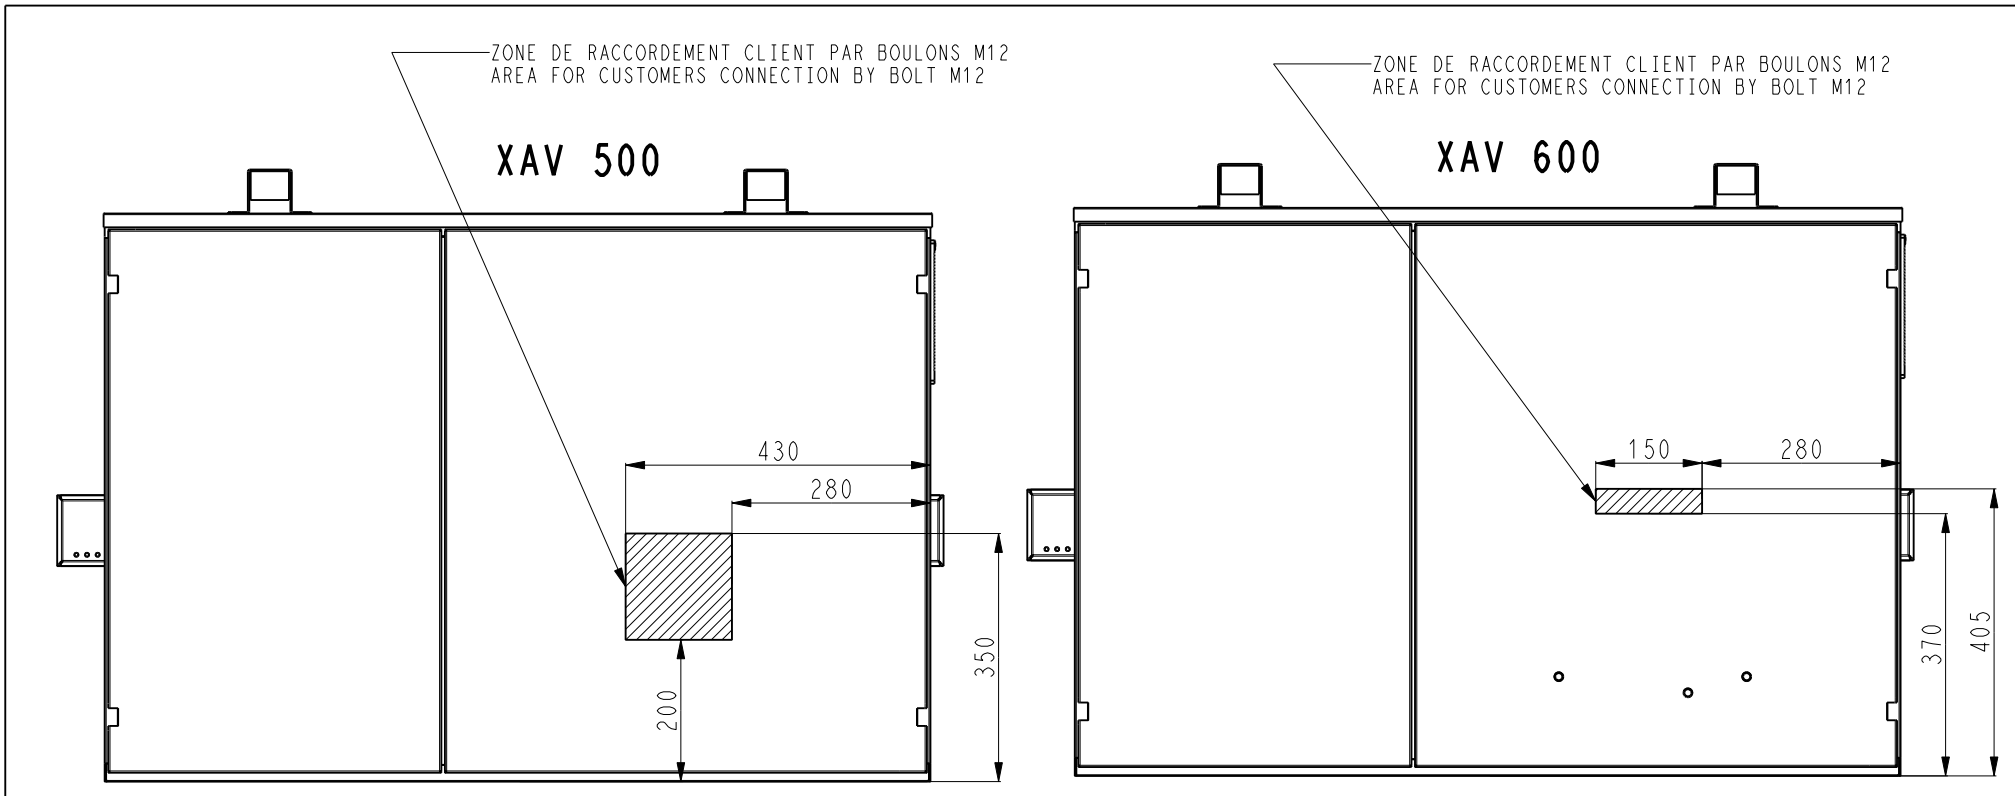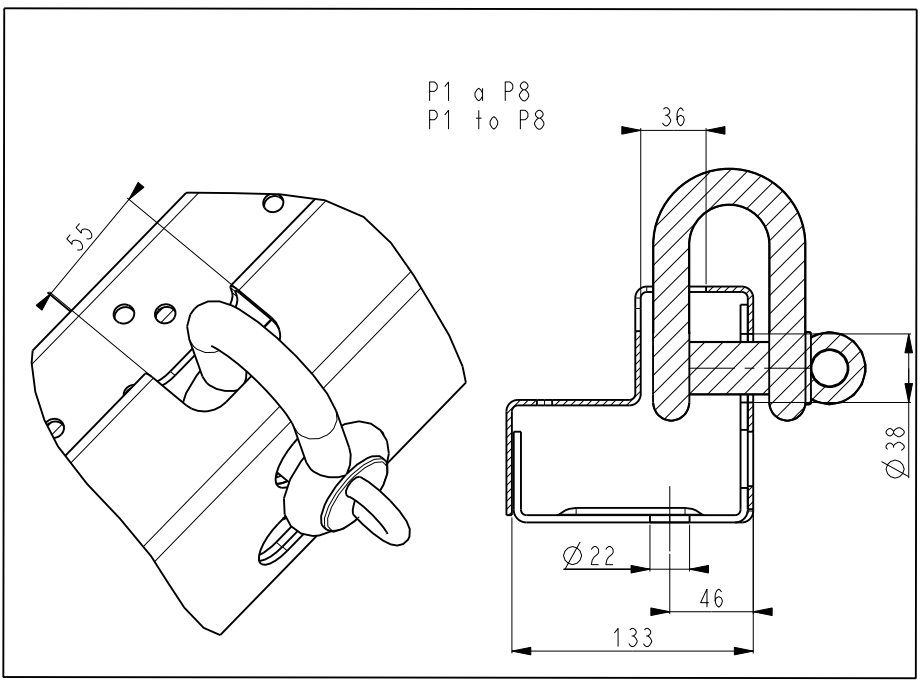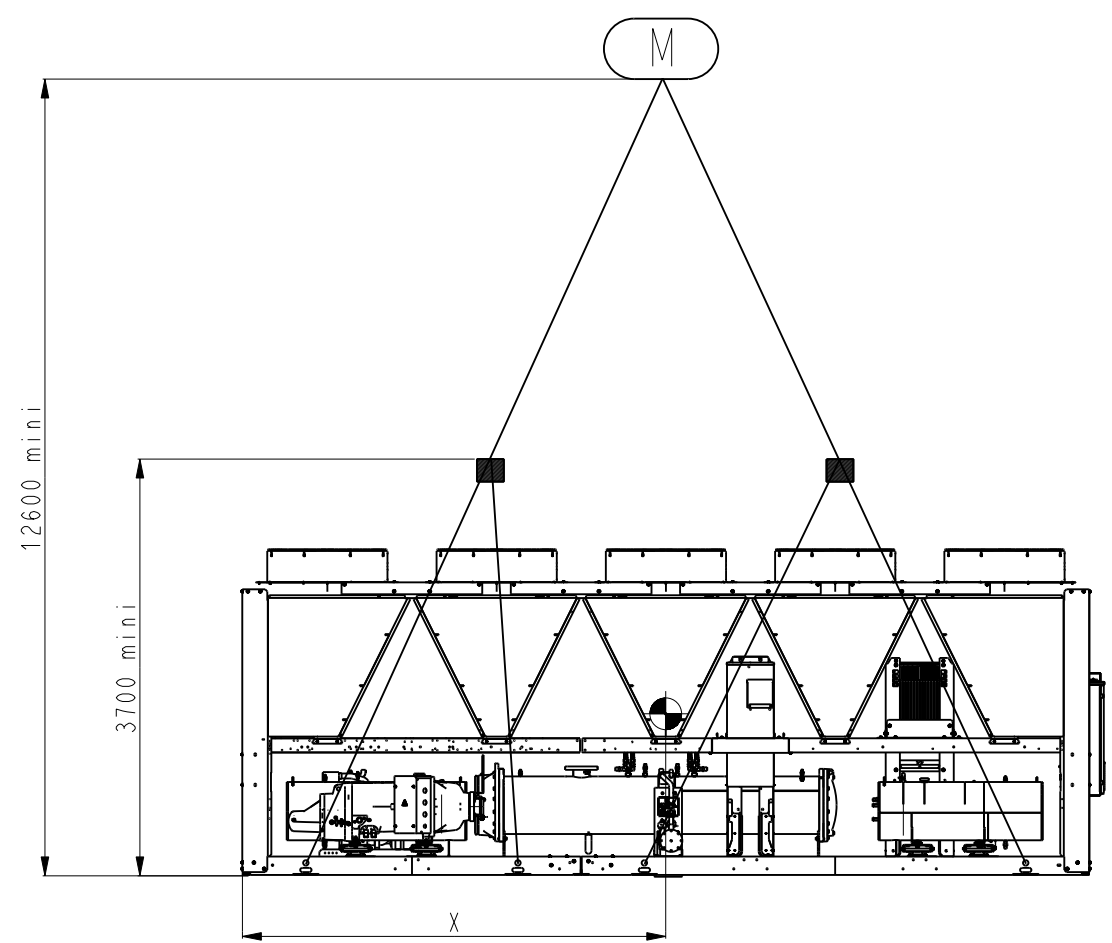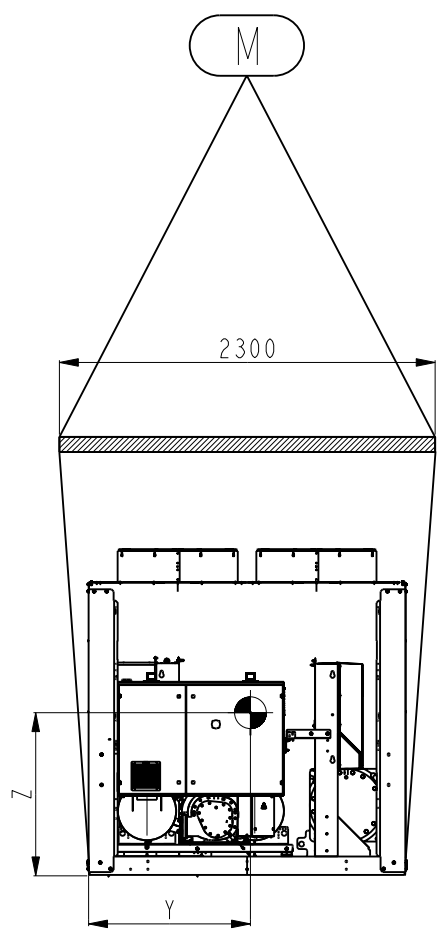

ELECTRICAL BOX: POWER CONNECTION

TOLERANCE	30XAV 0500/0600		DATE	Feuille Sheet 3/5 Indice
±10	*		26-Jun-15	

TAILLE SIZE	OPTIONS	PT (Kg)	P1 (Kg)	P2 (Kg)	P3 (Kg)	P4 (Kg)	P5 (Kg)	P6 (Kg)	P7 (Kg)	P8 (Kg)	X (mm)	Y (mm)	Z (mm)
30XAV 0500	STD UNIT	4832	533	390	448	417	743	738	843	721	3053	1057	879
30XAV 0500	OPT 279	5122	591	420	482	435	768	751	917	759	3049	1040	854
30XAV 0500	OPT 23 + OPT 279	5341	608	437	508	460	805	788	946	788	3049	1044	856
30XAV 0500	OPT 23	5051	550	407	473	443	780	775	872	750	3053	1060	881
30XAV 0600	STD UNIT	5220	574	396	413	378	834	833	980	812	3128	1044	787
30XAV 0600	OPT 279	5510	616	441	433	417	892	838	1034	839	3105	1037	787
30XAV 0600	OPT 23 + OPT 279	5729	634	458	459	443	929	876	1063	868	3102	1040	787
30XAV 0600	OPT 23	5439	591	413	439	403	871	871	1010	841	3125	1047	787

TOLERANCE  
±10

 
 


 
 
 
 

 
 

 
 
 



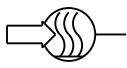
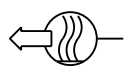
 


30XAV 0500/0600  
\*



DATE  
26-Jun-15

Feuille  
Sheet  
4/5  
Indice  
**C**

**00DCG000103900**

	ENGLISH	FRANCAIS	GERMAIN	ESPAÑOL	ITALIANO
	Cooler water inlet and outlet	Entrée et sortie eau évaporateur	Kaltwasser eintritt und austritt	Entrada y salida agua al evaporador	Entrata e uscita acqua evaporatore
	Cooler air vent	Purge air évaporateur	Kaltwasser entlüftungsventil	Purgador aire evaporador	Valvola sfogo aria evaporatore
	Water drain	Purge eau évaporateur	Kaltwasser abfluss	Drenaje agua evaporador	Scarico acqua evaporatore
	NA	NA	NA	NA	NA
	Safety relief valve LP	Soupape de sécurité BP	Verdampfer sicherheitsventil LP	Valvula de seguridad LP	Valvola di sicurezza LP
	NA	NA	NA	NA	NA
	NA	NA	NA	NA	NA
	NA	NA	NA	NA	NA
	Safety relief valve HP	Soupape de sécurité HP	Verdampfer sicherheitsventil HP	Valvula de seguridad HP	Valvola di sicurezza HP
	NA	NA	NA	NA	NA
	NA	NA	NA	NA	NA
	NA	NA	NA	NA	NA
	Services clearances required	Espace nécessaire à la maintenance	Freiraum für wartung	Espacio necesario para servicio y mantenimiento	Spazio necessario per il servizio
	Space required to remove cooler tubes	Espace nécessaire aun réentubage de l'évaporateur	Freiraum für rohren austauch	Espacio necesario para cambiar tubos de los intercambiadores	Spazio necessario per la rimozione dei tube evap.
	Electrical box	Coffret électrique	Schaltschrang	Caja electrica	Pannello elettrico
	Main disconnect switch	Interrupteur général	Haupttrennschalter	Interruptor de desconexion principal	Sezionatore general
	NA	NA	NA	NA	NA
	Total operating weight	Poids total en fonctionnement	Betriebsgewicht	Peso en funcionamiento	Peso in funzionamento
	Inlet water	Entrée eau	Wasser eintritt	Entrada agua	Entrata acqua
	Outlet water	Sortie eau	Wasser austritt	Salida agua	Uscita acqua
	Electrical supply entry	Entrée raccordement électrique	Strom Anschlüsse	Entrada cables electricos	Entrata cavi alimentazione
	Center of gravity	Centre de gravité	Maschinenschwerpunkt	Centro de gravedad	Centro di gravita
	Handling Rigging of the unit: the sizing of the rigging or lifting elements is the responsibility of the installer	Manutention de l'unité Le dimensionnement des éléments de manutention ou de levage sont sous la responsabilité du manutentionnaire	Anheben des geräts Der installateur ist für die dimensionierung der hebeelemente verantwortlich	Sostimiento de la unidad Las dimensiones de los elementos de sostimiento o levantamiento es responsabilidad de instalador	Sollevamento dell'apparechio La responsabilita del dimensionamento degli elementi di sistema di sollevamento e di pertinenza dell'installatore

TOLERANCE  
±10

30XAV 0500/0600

\*


DATE  
26-Jun-15Feuille  
Sheet  
5/5  
Indice

00DCG000103900

C